

---

# Rca Universal Remote Programming Guide

---

*Rca Universal Remote  
Programming Guide*

*Downloaded from  
[everybodystreet.com](http://everybodystreet.com) by  
Sasha & Kenyon*

---

## INTRODUCTION TO YOUR RCA UNIVERSAL REMOTE

---

In a world cluttered with multiple remotes for televisions, sound bars, DVD players, and streaming devices, a universal remote offers a streamlined solution. RCA universal remotes are among the most popular choices because of their affordability, reliability, and straightforward setup process. Whether you've just purchased a new RCA remote or found an older model in a drawer, mastering the **Rca Universal Remote Programming Guide** will help you consolidate control of all your entertainment devices into one handy remote.

Before diving into the programming steps, it is important to note that different RCA remote models may have slightly different buttons or instructions. However, the core methods—auto code search, direct code entry, and manual code search—remain consistent across most versions. This article will walk you through each method step by step, provide troubleshooting advice, and offer tips for maintaining your remote's performance. By the end, you'll be able to program your RCA remote in just a few minutes.

---

## UNDERSTANDING YOUR RCA

---

## REMOTE MODEL

---

First, identify the model number of your RCA universal remote. Common models include the RCRN05GR, RCRP05BR, RCR315, and the RCDB10. The model number is usually printed on a sticker inside the battery compartment or on the back of the remote. Having this number ready will make it easier to find the correct code list or instruction manual online.

Most RCA remotes operate on two or three AAA batteries. Ensure your batteries are fresh and inserted correctly. If the remote has been sitting unused for a while, weak batteries can cause programming failures. Replace them before you start the programming process.

---

## METHOD 1: AUTOMATIC CODE SEARCH

---

The automatic code search is the easiest way to program your RCA remote when you don't have the specific code for your device. This method works by cycling through all available codes in the remote's memory until it finds the one that controls your device.

## Steps for Auto Code Search

1. Turn on the device you want to program (e.g., TV, DVD player, or

- streaming box).
2. Press and hold the **CODE SEARCH** button on the remote (also labeled as "SETUP" on some models). Continue holding until the red light turns on, then release.
  3. Press the device button you wish to program (e.g., **TV, DVD, AUX**). The red light will blink once and stay on.
  4. Point the remote at the device and press the **POWER** button repeatedly. The remote will send different codes each time. When the device turns off, you have found a working code.
  5. Once the device turns off, press the **ENTER** or **OK** button to lock in that code. The red light will turn off.
  6. Test the remote by pressing other buttons like volume, channel, and input. If some functions don't work, repeat the process to find a more compatible code.
2. Press and hold the **CODE SEARCH** button until the red light turns on, then release.
  3. Press the device button (TV, DVD, etc.). The red light will blink and stay on.
  4. Enter the first code from your list using the number pad. After entering the last digit, the red light will turn off if the code is valid.
  5. Point the remote at the device and press **POWER**. If the device turns off, the code works. Test a few other functions.
  6. If the device does not respond, repeat the process with the next code on the list.

**Note:** The auto search can take several minutes because the remote cycles through hundreds of codes. Be patient and keep pressing the **POWER** button until the device responds.

---

## METHOD 2: DIRECT CODE ENTRY

---

If you have the specific three-, four-, or five-digit code for your device brand, direct code entry is the quickest method. You can find codes in the original manual or on RCA's official website.

# Steps for Direct Code Entry

1. Turn on the device you wish to program.

## Where to Find Codes

- Check the **instruction manual** that came with your remote.
- Visit the **RCA support website** and search for your remote model.
- Some third-party websites maintain updated code lists for universal remotes.
- Online forums and community posts often share working codes for lesser-known brands.

**Tip:** Write down the successful code for each device and keep it with your remote for future reference.

---

## METHOD 3: MANUAL CODE SEARCH (BRAND CODE SEARCH)

---

Some RCA remotes offer a brand-based search that shortens the code cycle by limiting it to codes associated with a specific brand. This is slower than direct entry but faster than a full auto search.

## Steps for Manual Brand Code Search

1. Turn on the device.
2. Press and hold **CODE SEARCH** until the red light turns on, then release.
3. Press the device button (e.g., TV). The red light will blink and stay on.
4. Press and release the **POWER** button. The red light will turn off.
5. Now press the **VOLUME UP** button repeatedly. The remote will send codes in groups. When the device turns off, stop pressing.
6. Press **ENTER** or **OK** to lock the code. Test the remote.

This method can be more efficient if you know the brand but don't have the exact numeric code.

---

### PROGRAMMING FOR SPECIFIC DEVICES

---

## Programming an RCA Remote to a TV

Most common usage: program the remote to control your television's power, volume, mute, input selection, and channel control. Follow the auto search or direct entry method using the TV device button. If you have a smart TV, ensure you also test the "Menu" button to navigate on-screen settings.

## Programming an RCA Remote to a DVD or Blu-ray Player

Use the **DVD** button (or **AUX** if DVD is not available). For combo units (VCR/DVD), you may need to program both separately or use a single code that controls both. Test play, pause, stop, skip, and eject functions.

## Programming an RCA Remote to a Streaming Device (Roku, Apple TV, Fire Stick)

Not all RCA remotes support streaming devices directly. Check your remote's compatibility list. If supported, you will often find codes in the manual for "STB" (set-top box) or "AUX". The programming steps remain the same. Note that some advanced functions (like voice control) may not work with a universal remote.

## Programming an

## RCA Remote to a Sound Bar or Audio Receiver

Use the **AUX** or **AUDIO** device button. Sound bars may share codes with TV brands, so try using the TV device button as well if AUX fails. Test volume, mute, and source selection.

---

### TROUBLESHOOTING COMMON PROGRAMMING ISSUES

---

## Remote Does Not Turn On the Device

- Check batteries: replace with fresh ones.
- Ensure you are pointing the remote directly at the device's IR sensor, within 10-15 feet.
- Remove any obstacles between remote and device.
- Try using the auto code search again; you may have missed the correct code.

## Only Some Buttons Work

- The code you used may only support basic functions. Try a different code from the list.
- Some RCA remotes can store multiple codes for one device. You may need to program a "learning"

sequence if your remote supports it.

- Older devices may require a different code set; check for updated code lists online.

## Red Light Blinks But No Response

- This often indicates the remote is in programming mode but not receiving a signal from you. Press buttons slowly and deliberately.
- If using direct entry, make sure you press the device button before entering the code.

## Remote Works But Volume Doesn't Control TV

- Some RCA remotes have separate volume control for TV and AUX. Ensure you press the TV button first, then test volume.
- If you are using a sound system, you may need to program the remote to control the receiver's volume instead.

---

### RESETTING YOUR RCA UNIVERSAL REMOTE

---

If you accidentally change settings or the remote behaves erratically, a factory reset can clear all programmed codes. Procedure may vary by model, but a common method is:

1. Remove batteries from the remote.
2. Press and hold the **POWER** (or any button) for 10 seconds to discharge residual power.
3. Reinsert batteries.
4. Press and hold the **CODE SEARCH** button until the red light turns on, then release.
5. Press the **0** (zero) button. The red light will blink twice and turn off.

After reset, you will need to reprogram all devices again.

---

### EXPANDING FUNCTIONALITY: LEARNING AND ADVANCED FEATURES

---

Some higher-end RCA remotes include “learning” capabilities. With a learning remote, you can teach it commands from your original device remote by pointing them at each other. This is useful for devices not in the code database. Check your manual for learning mode instructions. Typically it involves holding the learning button, pressing the source button, then pressing the command on the original remote while the learning remote is in “learn” mode.

Additionally, many RCA remotes support multi-device macros—sequences of commands executed by a single button press. For example, you could set up a “Watch Movie” macro that turns on your TV, sound bar, and Blu-ray player. Programming macros varies by model,

so consult your manual.

---

### MAINTENANCE TIPS FOR LONGEVITY

---

- Clean the remote’s IR emitter window with a soft, dry cloth to ensure strong signal transmission.
- Avoid dropping the remote or exposing it to liquids.
- If buttons become sticky, remove batteries and clean with isopropyl alcohol and a cotton swab (do not soak).
- Store the remote in a cool, dry place away from direct sunlight.

---

### CONCLUSION

---

Programming your RCA universal remote does not have to be a daunting task. Whether you choose the automatic code search for a hassle-free experience, direct code entry for speed, or manual brand search for targeted control, the process is intuitive once you understand the sequence. With this **Rca Universal Remote Programming Guide**, you now have a complete reference to set up your remote for any TV, DVD player, sound bar, or streaming device in your home. Remember to keep your code list handy, test all functions after programming, and don’t hesitate to reset the remote if you need a fresh start. A well-programmed universal remote simplifies your entertainment experience, reducing clutter and frustration. Enjoy the convenience of one remote to rule them all!