

---

# Panasonic Lumix Dc Zs 70 Tutorial

---

*Panasonic Lumix Dc Zs 70 Tutorial* Downloaded from [everybodystreet.com](http://everybodystreet.com)  
by Aleena & Kash

---

## MASTER THE PANASONIC LUMIX DC ZS70: A COMPLETE TUTORIAL FOR BEGINNERS AND ENTHUSIASTS

---

The Panasonic Lumix DC ZS70 (also known as the TZ90 in some markets) is one of the most versatile compact travel zoom cameras on the market. With a 30x optical zoom lens, a 20.3-megapixel sensor, and a tilting touchscreen, it packs incredible power into a pocket-friendly body. But to truly unlock its

potential, you need more than just the manual—you need a hands-on, step-by-step tutorial that walks you through setting up, shooting, and getting the best results in any situation. This **Panasonic Lumix DC ZS70 tutorial** will guide you from unboxing to advanced shooting techniques, helping you create stunning images and videos with confidence.

---

## GETTING STARTED: INITIAL SETUP AND KEY CONTROLS

---

# Charging and Turning On and Inserting the Setting the Battery the and SD Date/Time Card e

locks, and push the card in until it clicks.

Before you dive into the **Panasonic Lumix DC ZS70 tutorial** itself, ensure your camera is ready. Slide the battery door open and insert a fully charged DMW-BLC12 battery. Use a UHS-I Speed Class 3 or higher SD card for 4K video recording. The card slot is next to the battery. Press the battery gently until it

Press the **Power button** on the top plate. The camera will prompt you to set the date, time, and home zone. Use the rear **Control dial** to adjust values and press the **Menu/Set button** to confirm. This step is crucial for proper file naming and EXIF data.

# Understanding the Main Dials and Buttons

- **Mode Dial (top left):** Selects shooting modes—Intelligent Auto (iA), Program AE (P), Aperture Priority (A), Shutter Priority (S), Manual (M), and more. The **Panasonic Lumix DC ZS70 tutorial** will focus mainly on P, A, S, M, and iA.
- **Zoom Lever (around shutter button):** Rock

this left or right to zoom from 24mm wide to 720mm equivalent (30x optical). You can also enable **i.Zoom** or **Digital Zoom** for extra reach, though with some quality loss.

- **Fn1 / Fn2 Buttons:** Customizable - assign your most-used functions like ISO, White Balance, or 4K Photo mode.
  - **Control Dial (rear, top-right):** Rotate to change settings like shutter speed or aperture in manual modes.
-

## MODE

---

# Intelligent Auto (iA) – Point and Shoot Simplicity

If you're new to photography or just want the camera to decide everything, turn the dial to iA. The camera automatically detects scene types (sunset, portrait, macro, night portrait, etc.) and adjusts settings accordingly. It also activates **iHandheld Night Shot** and **iHDR** when

## RIGHT SHOOTING

needed. While it's great for quick snaps, this **Panasonic Lumix DC ZS70 tutorial** encourages you to explore creative modes for better control.

# Program AE (P) – Balanced Automation with Flexibility

In P mode, the camera sets both aperture and shutter speed for a good exposure, but you can shift the combination using the Control Dial (Program Shift). This gives you control over depth of field or motion blur

without fully manual operation. It's an excellent stepping stone for beginners.

## Aperture Priority (A) – Control Depth of Field

In A mode, you choose the aperture (f/3.3 at wide angle, up to f/6.4 at telephoto) and the camera picks the shutter speed. Use a wide aperture (smaller f-number) for blurred backgrounds in portraits, or a narrow aperture (larger f-number) for landscapes where

everything is in focus. This is one of the most valuable topics in any **Panasonic Lumix DC ZS70 tutorial**.

## Shutter Priority (S) – Freeze or Blur Motion

Rotate the dial to S and select your shutter speed – fast speeds like 1/1000s freeze action; slow speeds like 1/15s create motion blur (e.g., flowing water). The camera adjusts aperture accordingly. Remember that at the telephoto end, you

**SHARP TELEPHOTO**

speed (at least 1/720s) to avoid camera shake.

# Manual (M) – Full Creative Control

For experienced photographers, M mode gives you total command over aperture, shutter speed, and ISO. Use the Exposure Meter at the bottom of the screen as a guide. This mode is ideal for consistent lighting, such as stage performances or studio setups.

---

## **MASTERING THE 30X OPTICAL ZOOM - GETTING**

## **SHOTS**

---

The ZS70's standout feature is its 30x lens. However, handholding a 720mm equivalent lens can introduce shake. This tutorial recommends these tips:

- **Use the Zoom lever gently.**  
Don't jerk it; smooth motion prevents initial blur.
- **Enable Power O.I.S.** (Optical Image Stabilizer)  
– keep it set to **Mode 1** (continuous) for consistent framing in the viewfinder, or **Mode 2** (only during exposure) for slightly better stabilization.
- **Increase shutter speed.**

A general rule: use  $1/(\text{focal length})$  as minimum. At 720mm, aim for at least 1/800s if possible.

- **Stabilize your body.** Lean against a wall or use a **tripod** for extreme zooms.
- **Use the electronic viewfinder (EVF).** Pressing the camera against your face provides a third point of contact, reducing shake compared to using the rear LCD.

---

## UNLOCKING THE 4K PHOTO MODES

---

The **Panasonic Lumix DC ZS70 tutorial** wouldn't be complete without explaining 4K Photo. This feature

extracts 8-megapixel stills from a 4K video burst (30 fps). It's perfect for fast action like sports or wildlife.

1. Press the **4K Photo button** (a dedicated button on the side) or select it from the recording menu.
2. Choose among three modes: **4K Burst (S/S)** to start/stop manually; **4K Burst (Pre)** which saves frames from just before you press the shutter halfway; or **4K Burst (Start/Stop)**.
3. Focus, press the shutter to start recording, and release to stop. Then use the **Playback** mode and the **pict** icon to browse frames

and select the perfect one.

4. Save your chosen frame as a JPEG. This technique is excellent for capturing decisive moments without the risk of missing a shot.

---

## POST-FOCUS AND FOCUS STACKING - INCREDIBLE MACRO CAPABILITIES

---

Another gem in this camera is **Post-Focus**. When enabled, the camera records a 4K burst while shifting focus from near to far. Afterward, you can tap any area of the image on the screen to refocus in post-processing. To access:

- Go to the **Rec**

menu, find **Post-Focus** (under 4K Photo options).

- Press the shutter – the camera takes a short burst.
- In playback, touch the screen on the subject you want sharp. The camera instantly recomputes the image.
- You can also use **Focus Stacking** to combine multiple focus points into one fully sharp macro image. This is revolutionary for close-up photography and is often highlighted in a detailed **Panasonic Lumix DC ZS70 tutorial**.

---

## VIDEO RECORDING - GETTING THE MOST OUT OF 4K

---

The ZS70 records 4K (3840x2160) at 30p or 24p. For smooth footage, use a fast SD card (U3 rating). Steps for great video:

1. Rotate the Mode dial to **Movie** (the camera icon).
2. In the video menu, set **Rec Format** to **MP4** for easy editing, or **AVCHD** if you prefer better compression.
3. Select resolution: 4K for maximum detail, 1080p for 60fps slow motion.
4. Enable **Continuous AF** for moving subjects, but for static scenes use **AFS** (Single) to

avoid focus hunting.

5. Use the **Wind Cut** filter when recording outdoors to reduce wind noise, but note it may affect audio quality.
6. **Pro tip:** Use a small tripod or table top mini tripod for stable panning shots.

---

## OPTIMIZING IMAGE QUALITY - ISO, WHITE BALANCE, AND PICTURE PROFILES

---

# ISO Sensitivity

The base ISO is 80 (extended to 100) - use it for maximum

detail. The camera performs well up to ISO 800, and tolerably up to 1600 for small prints or social media. Noise reduction can be adjusted under **Noise Reduction** in the Photo Style menu. Lower NR preserves detail but may show grain; higher NR smooths out noise at the cost of fine texture.

## White Balance

Auto White Balance (AWB) is generally reliable, but for indoor tungsten or mixed lighting, switch to **White Set** (custom) by pointing the camera at a white card. You can also use the **White Balance Shift** option to fine-tune warm/cool tones on a grid.

## Picture Styles

Under the **Photo Style** menu, choose from Standard, Vivid, Natural, Monochrome, Landscape, Portrait, and more. For maximum flexibility in post-processing, select **Flat** which reduces contrast and saturation. If you prefer jpegs straight out of camera, **Vivid** makes colors pop, while **Natural** gives more realistic tones.

---

### USING THE TILTING TOUCHSCREEN AND WI-FI FEATURES

---

The LCD flips up 180° (great for selfies and vlogging) and tilts down 45° (useful for low-angle shots). Touch functions

include:

- **Touch Shutter:**  
Tap the screen to focus and shoot.
- **Touch AF:** Move the focus point by touching the screen.
- **Touch Pad AF:**  
Drag your finger on the screen while using the EVF to shift focus.

For Wi-Fi, install the **Panasonic Image App** on your smartphone. Pair via QR code and unlock remote control, geotagging, and instant image transfer. This turns your ZS70 into a powerful travel camera that can share images on the go.

---

## ADVANCED TIPS AND TROUBLESHOOTIN

## G

---

# Burst Shooting with RAW

The camera can shoot 10 fps in RAW (full resolution) for short bursts, but the buffer slows after about 10 frames. For continuous action, use **4K Photo** instead - you'll get 30 fps at 8MP with practically unlimited buffer.

# Lens Error? Clean the

# Contacts

If you see “Please turn camera off and then on” or a lens error, first wipe the lens barrel contacts with a dry microfiber cloth. If persistent, retract the lens manually (gently push it back in) but never force it. A full

manual reset via the menu (Setup > Reset) can also help.

# Self-Timer for Landscapes